

# CLIM8ZONE™



## Information Guide

*spaTouch\*3*

Your Single Source Solution

# THANK YOU

for using Balboa Water Group spa controls.

Please visit us at  
[www.BalboaWaterGroup.com](http://www.BalboaWaterGroup.com)





# TEMPERATURE MODES

CLIM8ZONE™ has four Temperature modes for heating/cooling spa water.

- 1 **HEATING MODE** *(Default)*  
This mode only heats the spa water. All cooling with the CLIM8ZONE™ unit is disabled.
- 2 **COOLING MODE**  
This mode only cools the spa water. All heating with the CLIM8ZONE™ unit is disabled.
- 3 **HEATING AND COOLING MODE** *(Default)*  
This mode heats and cools the spa water with the CLIM8ZONE™ unit enabled.
- 4 **DISABLED**



# eHeater MODES

The BP control system has three eHeater modes.

- 1 **CONTINUOUS**  
The electric heater (eHeater) is continuously enabled.
- 2 **eBOOST** *(Default)*  
The electric heater is enabled temporarily when an extra boost is required.
- 3 **DISABLED**




# SPEED MODES

CLIM8ZONE™ has three Speed modes.

- 1 **AUTO SMART** *(Default)*
  - For Heating or Cooling
  - Uses Artificial Intelligence
  - Variable Heating/Cooling capacity
  - The CLIM8ZONE™ computer automatically adjusts the compressor frequency up or down using an algorithm that is based on ambient air temperature and water temperature.
  - This algorithm balances a best case in most conditions for efficiency and noise vs heating/cooling output of the CLIM8ZONE unit.
- 2 **MANUAL HIGH**
  - For Heating or Cooling
  - Highest Heating Capacity
  - Fastest Water Heating/Cooling
  - Low COP (i.e. Low Energy Efficiency)
  - High Compressor Frequency – Fixed, i.e. does not adjust based on environmental conditions
  - The CLIM8ZONE unit Compressor Noise is Maximum
- 3 **MANUAL LOW**
  - For Heating or Cooling
  - Lowest Heating/Cooling Capacity
  - Slowest Water Heating
  - High COP (i.e. High Energy Efficiency)
  - Low Compressor Frequency – Fixed, i.e. does not adjust based on environmental conditions
  - The CLIM8ZONE unit Compressor Noise is Minimum

# PANEL spaTouch™ 3

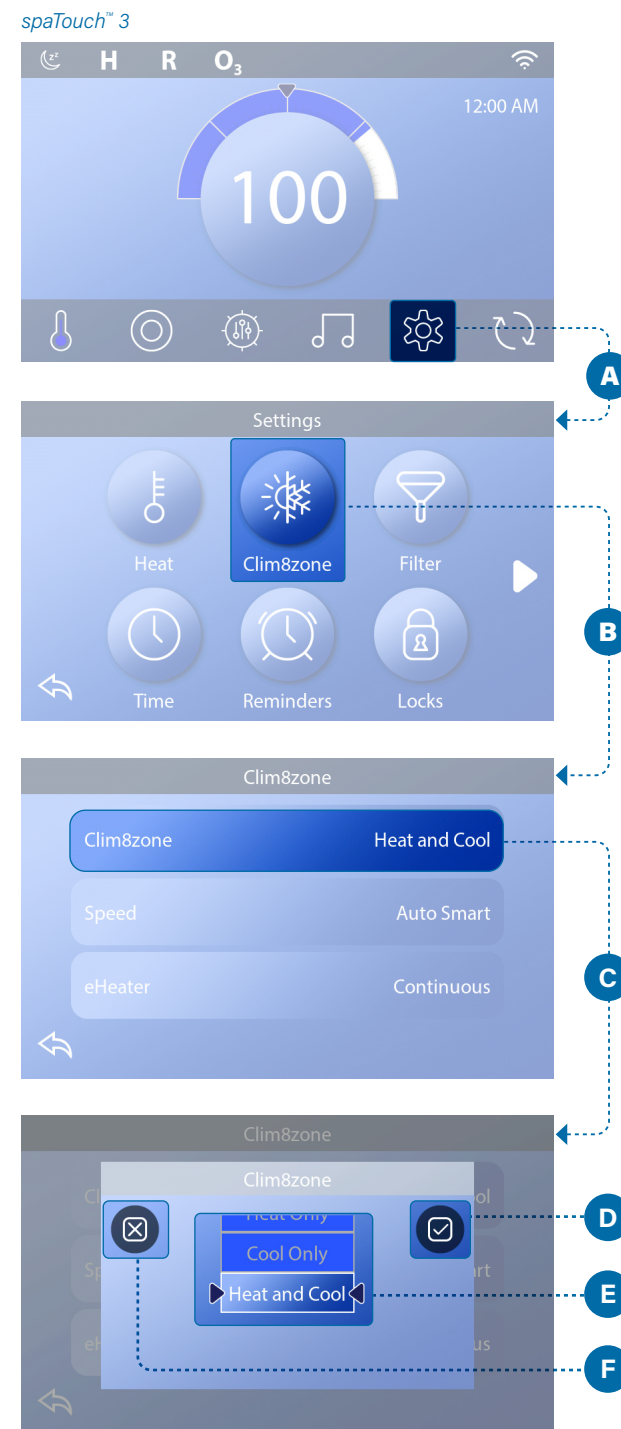

## SET THE TEMPERATURE MODE

Follow these steps to set the Temperature mode.

1 - Press the Settings button (A) to enter the Settings screen.

2 - Press the CLIM8ZONE™ button (B) to enter the CLIM8ZONE™ screen.

3 - Press the CLIM8ZONE™ button (C) to enter the CLIM8ZONE™ screen.

4 - Select one of the following Temperature modes (E):

**Heat Only** (Default)

**Cool Only**

**Heat and Cool**

**Disabled**

5 - Press the Save button (D) to save your setting. Press the Cancel button (F) to cancel your setting.

Your setting is complete.



## SET THE SPEED MODE

Follow these steps to set the Temperature mode.

1 - Press the Settings button (A) to enter the Settings screen.

2 - Press the CLIM8ZONE™ button (B) to enter the CLIM8ZONE™ screen.

3 - Press the Speed button (C) to enter the Speed screen.

4 - Select one of the following Speed modes (E):



**Manual High**

**Auto Smart (Default)**

**Manual Low**

5 - Press the Save button (D) to save your setting. Press the Cancel button (F) to cancel your setting.

Your setting is complete.

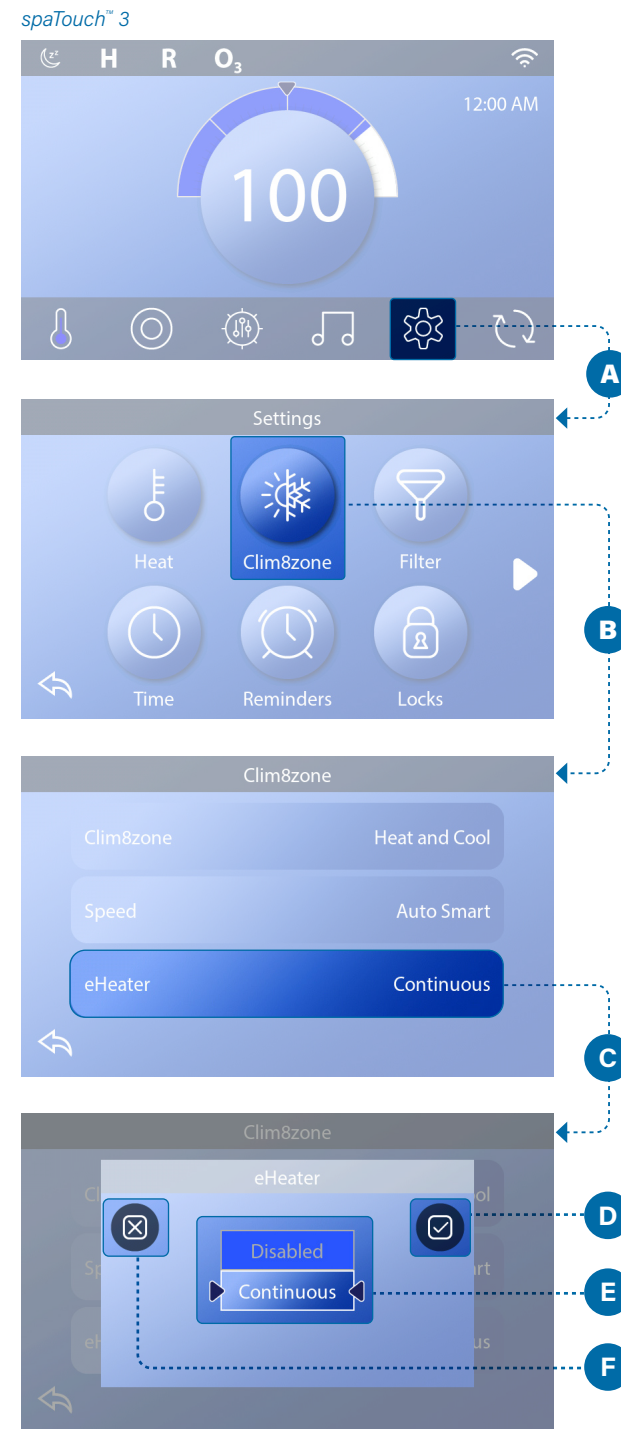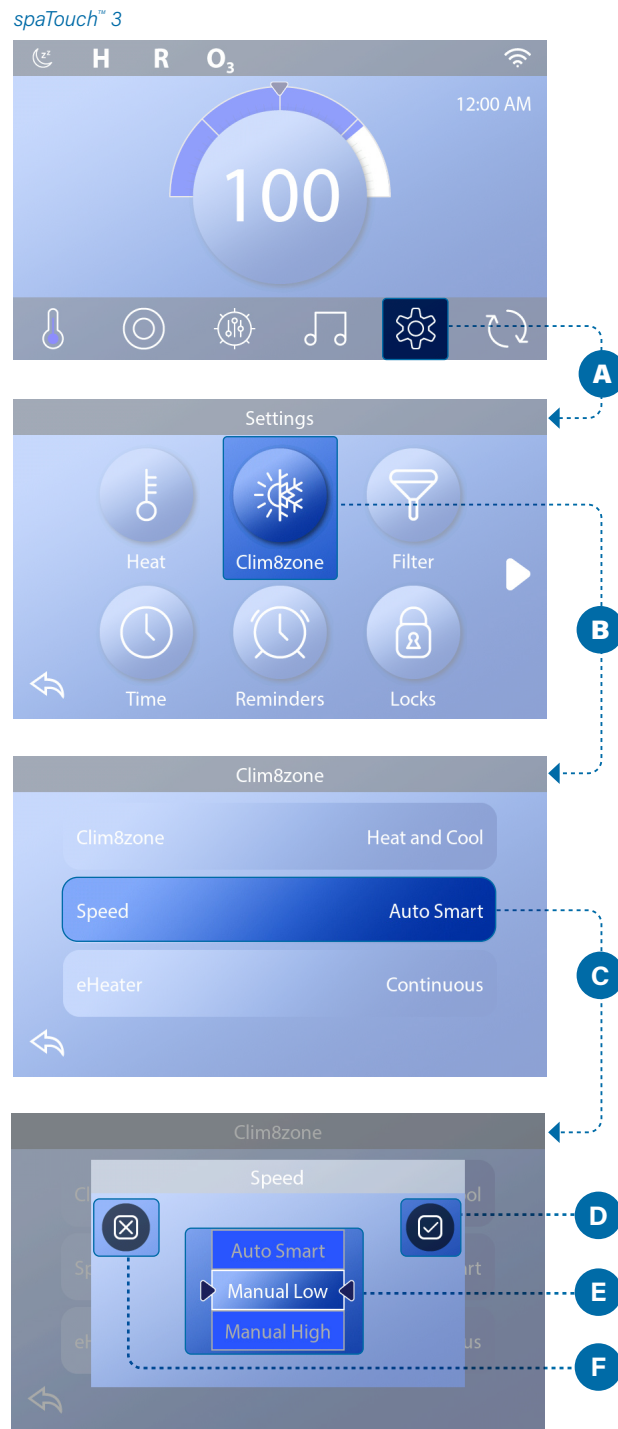

## SET THE eHEATER MODE

Follow these steps to set the eHeater mode.

1 - Press the Settings button (A) to enter the Settings screen.

2 - Press the CLIM8ZONE™ button (B) to enter the CLIM8ZONE™ screen.

3 - Press the eHeater button (C) to enter the eHeater screen.

4 - Select one of the following eHeater modes (E):

**Disabled**

**Continuous**

**eBOOST (Default)**

5 - Press the Save button (D) to save the new setting. Press the Cancel button (F) to cancel the setting change.

Your setting is complete.



## CLIM8ZONE™

### ✉ Email

---

info@balboawater.com

### ☎ Phone

---

P : + 714.384.0384  
Customer Service is available:  
M - F 7:00AM to 6:00PM PT

### 📍 Corporate Office

---

Balboa Water Group  
3030 Airway Avenue  
Costa Mesa, CA 92626

---

### **MEXICO OPERATIONS**

Balboa Water Group  
Aguila Azteca 6011  
Baja Maq. El Aquila  
Mexico 22221

### **EUROPEAN OPERATIONS**

Balboa Water Group  
Hydroair International  
ApS Roustvej 50 DK-6800  
Varde